





80037 Contemporary Workcenter Assembly Instructions

HARDWARE


A Allen Wrench
M5 x1


B JCBB
M8 x 50mm x12


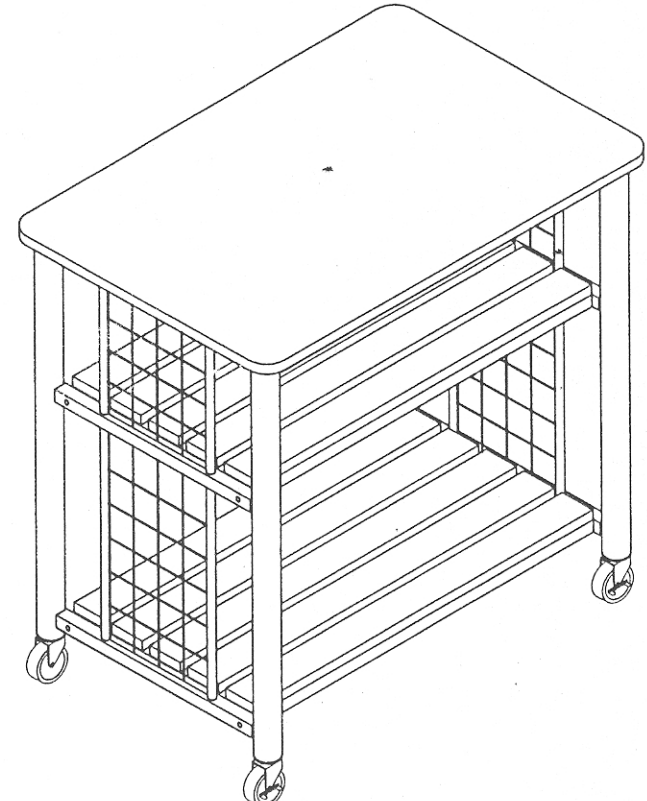
C Spanner
14.3 x1


D Hooks
x6


1

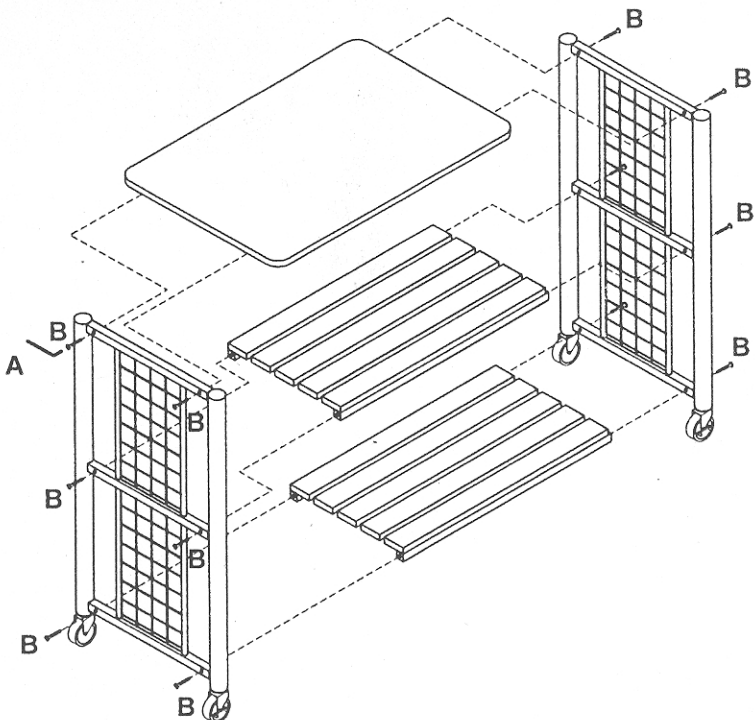

2



IMPORTANT! DO NOT TIGHTEN SCREWS OR BOLTS UNTIL COMPLETELY ASSEMBLED!!

Customer Service 0607 - 652 7321