







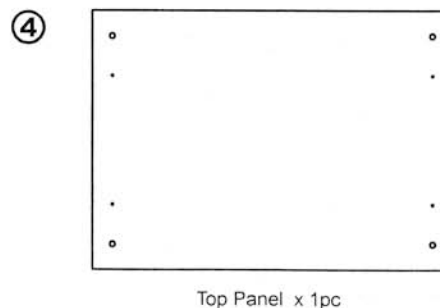
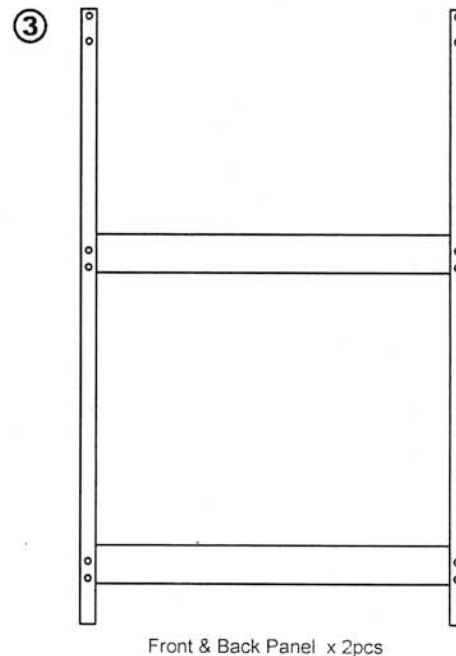
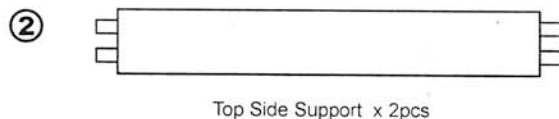
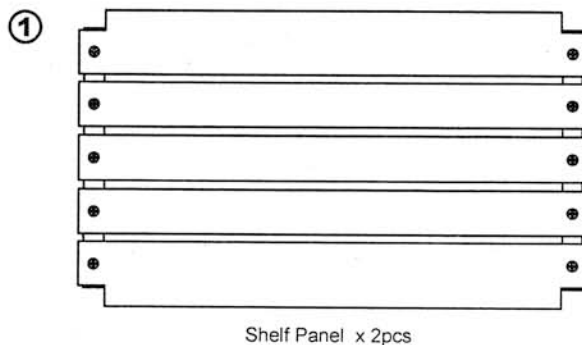
81515 Kitchen Trolley

Assembly Instructions

HARDWARE

- A JCBC

M6 x 60mm x8
- B Wood Dowel

M8 x 30mm x12
- C Wood Screw

M4 x 35mm x4
- D 2" Locking Caster

x4
- E Wood Button

M10 x8
- F Allen Wrench

M4 x1

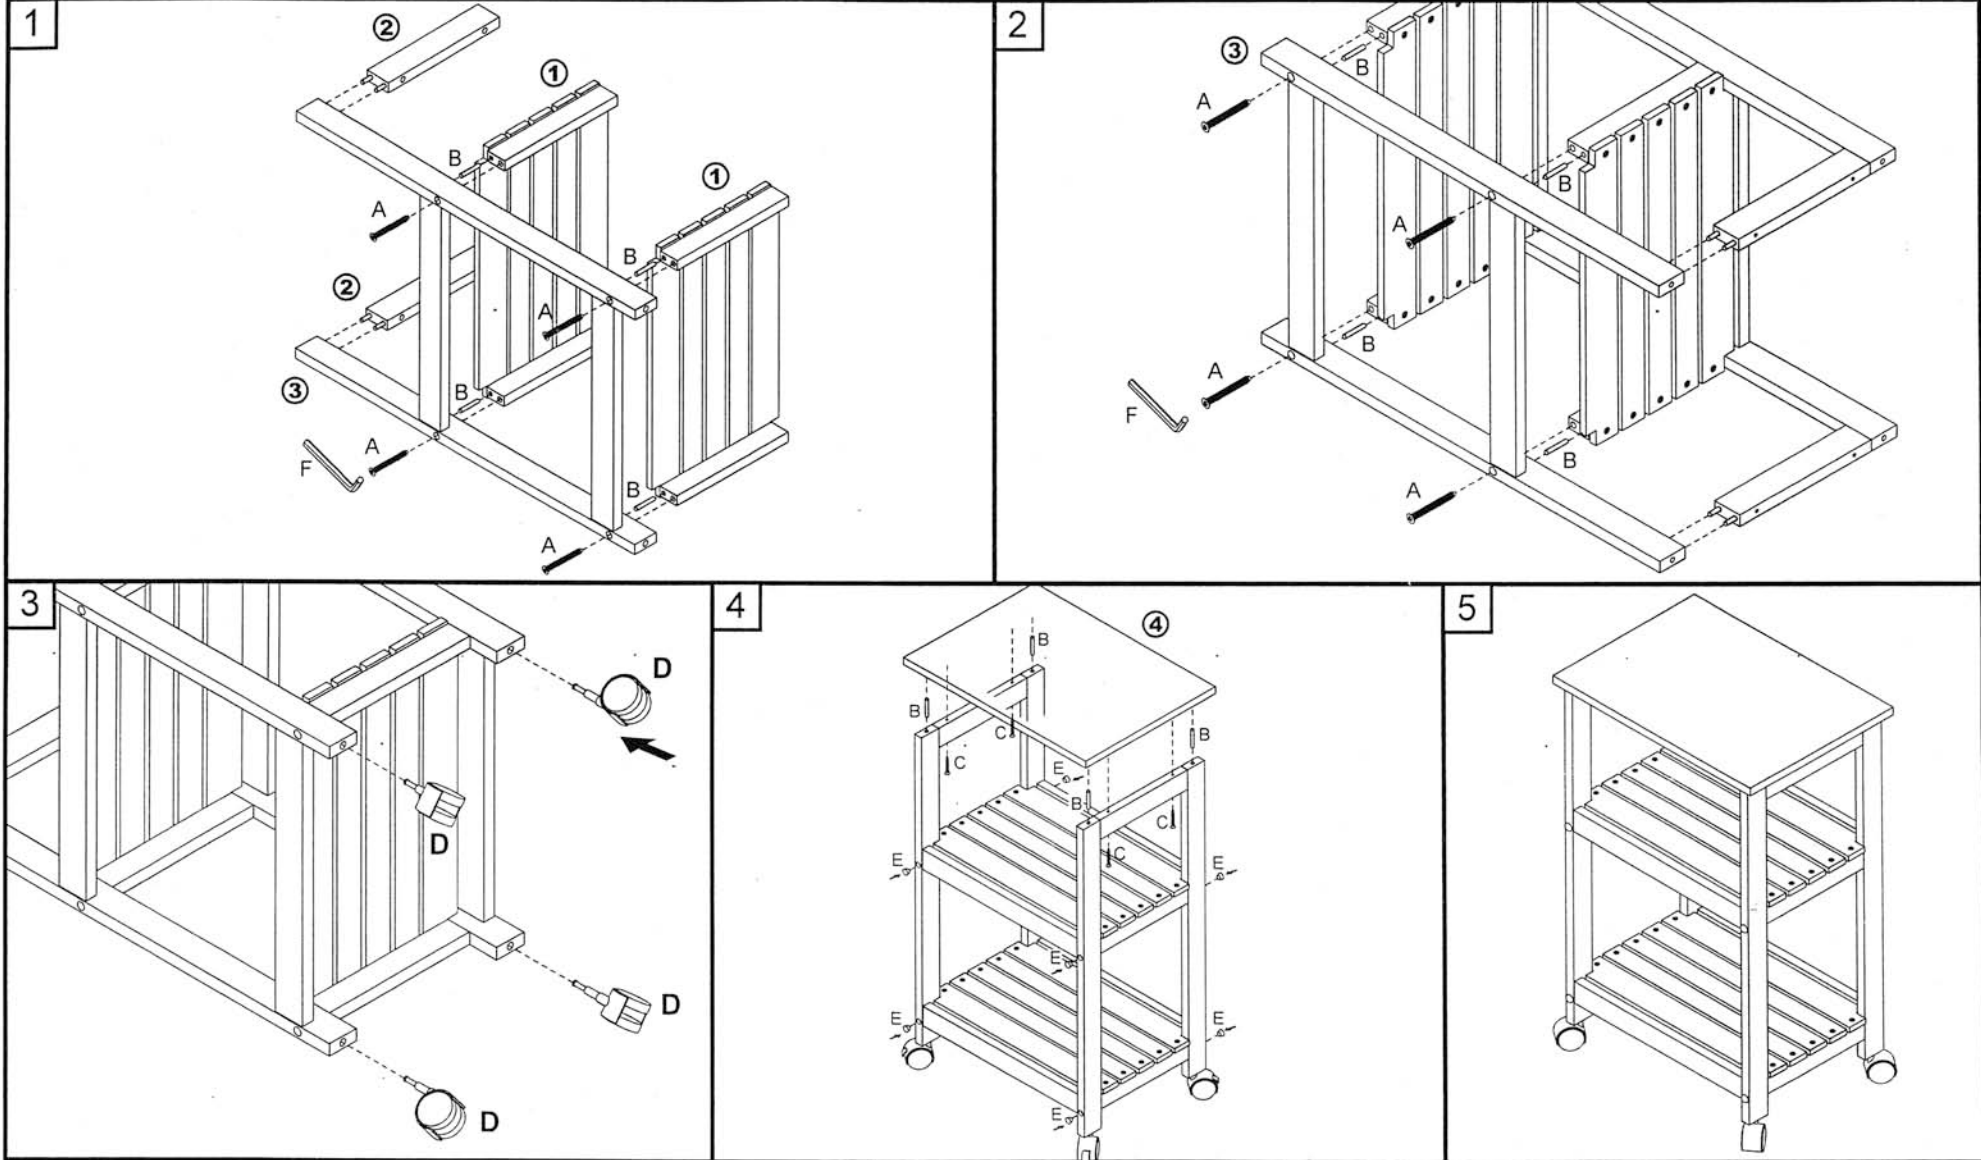
PARTS



IMPORTANT! DO NOT TIGHTEN SCREWS OR BOLTS UNTIL COMPLETELY ASSEMBLED!!

81515 Kitchen Trolley

Assembly Instructions



IMPORTANT! DO NOT TIGHTEN SCREWS OR BOLTS UNTIL COMPLETELY ASSEMBLED!!

Customer Service 0607 - 652 7321